

Зип Общепит

vsezip.ru

+7(812)987-08-81




**30CPS**

**Edition 20110101-**

Зип Общепит

vsezip.ru

+7(812)987-08-81

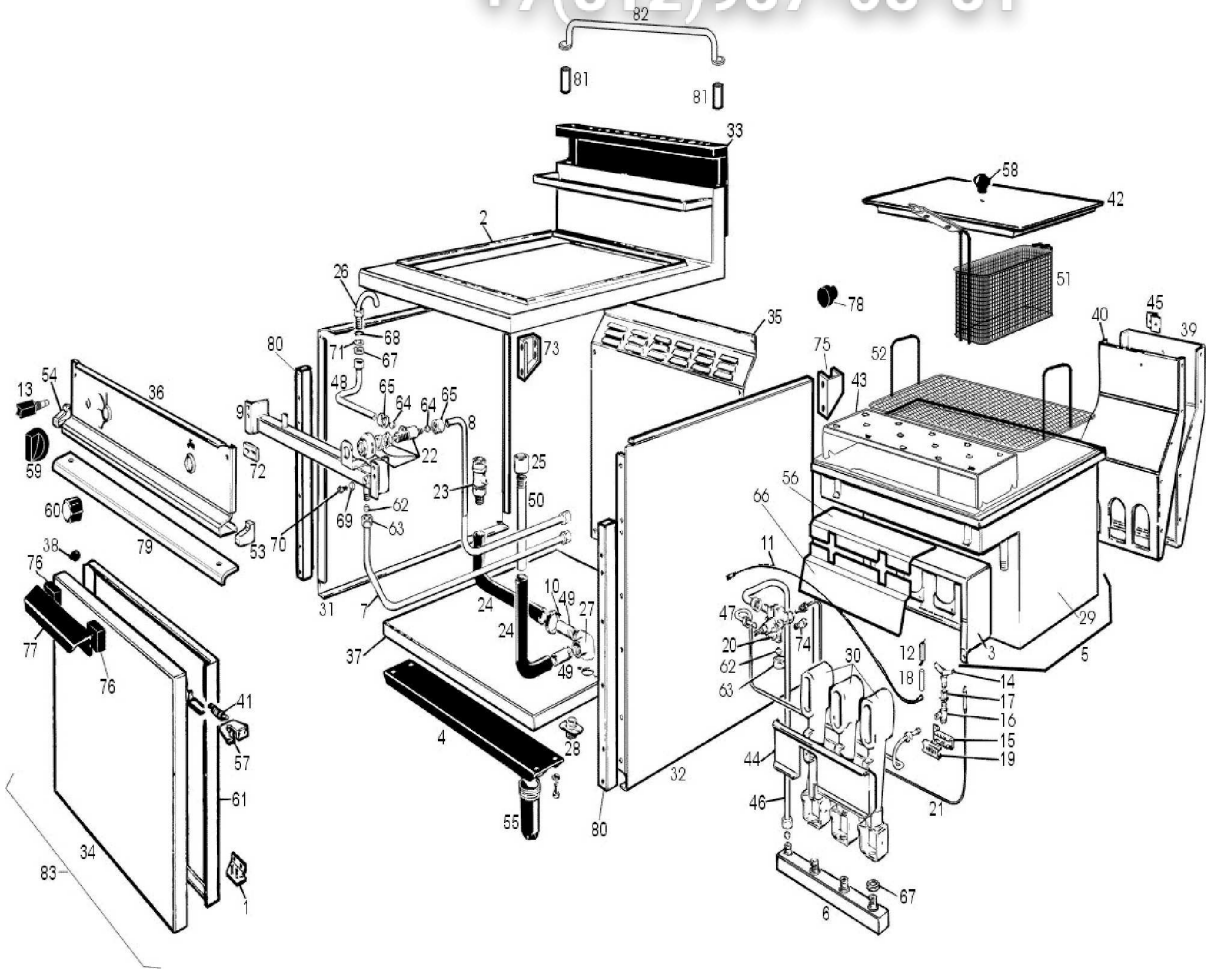

Pos	Code	Description	Unit
001	36M2500	RH LOWER HINGE ASS. Y	01/11/1995-
002	30M2020	TOP ASS. Y	01/11/1995-
003	3AQ0091	BURNER HOUSING ASS. Y	01/11/1995-
004	30T0030	FOOT HOUSING ASS. Y	01/11/1995-
005	6004300	WELL REPLACEMENT KIT	01/11/1995-
006	30Z7561	GAS MANIFOLD ASSEMBLY	01/12/1997-
007	30Z7181	PIPE	01/11/1995-
008	30Z7191	PIPE	01/11/1995-
009	30Z7940	GAS MANIFOLD ASS. Y	01/11/1995-
010	3140300	HOSE CLAMP	01/11/1995-
011	32A0210	CABLE "HF" 700MM	01/11/1995-
012	32T0010	IGNITION PLUG	01/11/1995-
013	32T0130	PIEZO IGNITION	01/11/1995-
014	32Z2241	2 FLAMES BURNER	01/11/1995-
015	35S5080	SUPPORT	01/11/1995-
016	33A2900	PILOT BURNER BODY	01/11/1995-
017	33A0970	RING NUT	01/11/1995-
018	131AA46	HOSE 8'X40	01/11/1995-
019	33A0950	REAR BRACKET	01/11/1995-
020	33A1040	GAS CONTROL	01/11/1995-
021	33A0520	THERMOCOUPLE	01/11/1995-
022	33D0590	"COCK 3/8""	01/11/1995-
023	33D1740	COCK MF	01/11/1995-
024	33M0800	PIPE	01/11/1995-
025	33Q2260	SOCKET F 1"	01/11/1995-
026	33Q2730	WATER SPOUT	01/11/1995-
027	33Q2880	SIDE OUTLET ELBOW	01/11/1995-
028	33Q5730	NIPPLE ASS. Y	01/11/1995-
029	30W2860	WELL ASSEMBLY	01/11/1995-
030	34A1670	VERTICAL BURNER	01/11/1995-
031	35C0530	LH PANEL	01/11/1995-
032	35C0580	RH PANEL	01/11/1995-
033	35B2330	FLUE COVERING	01/11/1995-
034	35G4220	DOOR	01/11/1995-
035	35B2391	REAR PANEL	01/11/1995-
036	35B9390	UPPER CONTROL	01/11/1995-
037	35M6561	BOARD BOTTOM PLATE	01/11/1995-
038	36D6860	FOOT	01/11/1995-
039	35D4641	HALF FLUE REAR PLATE	01/11/1995-
040	35D4651	HALF FLUE FRONT PLATE	01/11/1995-
041	36G5240	SPRING	01/11/1995-
042	35G3020	WELL LID	01/11/1995-
043	35M5270	FALSE BOTTOM ASS. Y	01/11/1995-
044	35S5550	BURNER SUPPORT	01/11/1995-
045	35T7200	"Z" BRACKET	01/11/1995-
046	35X1050	BURNER PIPE	01/11/1995-
047	35X1060	PILOT LIGHT PIPE	01/11/1995-
048	35Z1290	PIPE	01/11/1995-
049	35Z3490	SPACER PIPE	01/11/1995-
050	35Z6560	"PIPE Ø 1""X280"	01/11/1995-
051	36A2582	PASTA BASKET	01/11/1995-

Pos	Code	Description	Info
052	36A2681	BOTTOM NET	01/11/1995-
053	36D3420	RH END SIDE	01/11/1995-
054	36D3430	LH END SIDE	01/11/1995-
055	36D4000	ADJUSTABLE FOOT	01/11/1995-
056	35Q5051	HEAT SHIELD	01/11/1995-
057	36M2541	RH UPPER HINGE	01/11/1995-
058	36M2130	HANDLE	01/11/1995-
059	36M2390	GAS CONTROL KNOB	01/11/1995-
060	36M2642	RED RING KNOB	01/01/2011-
061	3AG0120	INNER DOOR FRAME ASS.Y	01/11/1995-
062	36Q0030	BICONE Ø12X8	01/11/1995-
063	36Q0050	BICONE NUT Ø 12	01/11/1995-
064	36Q0080	BICONE Ø 10X6.5	01/11/1995-
065	36Q0140	BICONE NUT Ø 10	01/11/1995-
066	35Q6660	HEAT SHIELD	01/11/1995-
067	36Q1110	LOCK NUT 3/8"	01/11/1995-
068	37Q1210	"O" RING Ø 18.77"	01/11/1995-
069	3128460	WASHER	01/11/1995-
070	31A7380	SCREW TE M5X10	01/11/1995-
071	3120740	WASHER	01/11/1995-
072	35T9650	FLAT BRACKET	01/11/1995-
073	35Q8290	LEFT HAND PANEL	01/11/1995-
074	32Z1460	VALVE MAGNET	01/11/1995-
075	35Q8300	RIGHT HAND PANEL	01/11/1995-
076	36M3720	SPACER	01/11/1995-
077	36M3900	HANDLE	01/11/1995-
078	36Q1410	CAP	01/11/1995-
079	35S5090	BRACKET	01/11/1995-
080	35B4381	VERT. UP RIGHT	01/11/1995-
081	35X3340	SPACER PIPE	01/11/1995-
082	3600220	FLUE GUARD	01/11/1995-
083	6011150	DOOR ASS.Y	01/11/1995-