

Зип Общепит
vsezip.ru
+7(812)987-08-81



L45

Edition 20140115-

vsezip.ru

This exploded view diagram illustrates the assembly of a refrigerator. The main components shown include the top panel (71), the main body (1), the door (68), and the base (2). The diagram is divided into several sections, each showing a different part of the assembly. Key components and their assembly order are indicated by numbers:

- Top Panel (71):** The topmost part of the refrigerator, shown with its mounting brackets (74, 73) and screws (75, 76).
- Main Body (1):** The central part of the refrigerator, shown with its internal components (17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122).
- Door (68):** The front door of the refrigerator, shown with its internal components (12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122).
- Base (2):** The bottom part of the refrigerator, shown with its internal components (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122).

The diagram also includes callouts for specific components, such as the compressor (115), condenser coils (116, 117, 118, 119, 120, 121, 122), and the evaporator fan (123).

Pos	Code	Description	Info
001	30G3190	DOOR ASS. Y	01/10/1997-
002	30M3270	BOTTOM PLATE	01/10/1997-
003	30Q0280	FILTER	01/10/1997-
004	30Q1510	FILTER Ø98 H=117	18/11/1999-
005	30T3150	HINGE RH-LH	01/10/1997-
007	30T1370	GUIDE	01/10/1997-
008	30W0870	TANK	01/10/1997-
009	36G8540	WASH BLADES 495X58X16	12/06/1999-
010	30Z1491	COMPL. RINSE ARM	01/10/1997-
011	37M7111	NAME PLATE	01/10/1997-
012	37M7200	DOOR TRIM	01/10/1997-
013	3150230	GASKET	01/10/1997-
014	3150290	SUMP GASKET	01/10/1997-
015	3151770	GASKET	01/10/1997-
016	3152010	GASKET	01/10/1997-
017	3190360	PIN	01/10/1997-
018	31W0061	SPRING	16/04/1998-
019	32X0130	GROMMET Ø29-Ø37	01/10/1997-
020	32D0440	CABLE CLAMP	01/10/1997-
021	32D0840	LIVE TERMINAL	01/10/1997-
022	32D0860	GROUND TERMINAL	01/10/1997-
023	32D1140	LOCK NUT	01/10/1997-
024	32D0850	TERMINAL	01/11/1997-
025	32D1220	TERMINAL CLAMPING	01/10/1997-
026	32D1230	BOARD "OMEGA" BRACKET	01/10/1997-
027	32G0400	HEATING EL.	18/11/1999-
028	3240720	HEATING ELEMENT	01/10/1997-
029	32M4760	MOTOR PUMP	18/11/1999-
030	32W0970	SWITCH	01/10/1997-
031	32W0980	SWITCH	01/10/1997-
032	32W1670	SIGNAL LAMP	01/10/1997-
033	32W0870	MAGNET	01/10/1997-
034	32W3240	MICROSWITCH	01/10/1997-
035	32X0120	GROMMET Ø 21	01/10/1997-
036	32V0200	THERMOSTAT 30° - 90°	01/10/1997-
037	32Z2000	RELAY	01/10/1997-
038	32Z2011	SAFETY THERMOSTAT	01/10/1997-
039	32Z4801	RELAY	01/10/1997-
040	32Z8100	PROGRAMMER	05/10/1997-
041	3300230	DISCHARGE ASPIRATION	01/10/1997-
042	3300240	DISCHARGE	01/10/1997-
043	33D0061	DISPENSER	01/10/1997-
044	33D0140	OVERFLOW	15/01/2014-
045	33D2230	CHECK VALVE	18/11/1999-
046	33D0660	RINSE AID TANK	01/10/1997-
047	33D1371	INLET WATER SOLENOID	01/10/1997-
048	33M0350	VALVE PIPE	01/10/1997-
049	33M0130	WASHING/RINSE HUB	01/10/1997-
050	33M0170	SUMP	01/10/1997-
051	33M0180	FLANGE	01/10/1997-
052	33M0490	PIPE	01/10/1997-

Pos	Code	Description	Info
053	33M0220	AIR TRAP	01/10/1997-
055	3070540	WASHING INFER. PIPE	22/05/2006-
056	33M0360	FITTING FLANGE	01/10/1997-
057	33M0500	HUB+NUT	01/10/1997-
058	33Q2000	PIN	18/11/1999-
059	33Q1090	PIN	01/10/1997-
060	33Q1860	RING NUT	01/10/1997-
061	33Q1890	PIN	01/10/1997-
062	33Q3070	"PIPE FITTING ""T"""	01/10/1997-
063	33M0580	RINSE COUPLING	01/10/1997-
064	34A0760	BOILER	01/10/1997-
066	35D2750	BOTTOM PANEL	01/10/1997-
067	35D2950	LH SIDE PANEL	01/10/1997-
068	35D2960	RH SIDE PANEL	01/10/1997-
069	35C8210	BACK PANEL	01/10/1997-
070	35D8710	SOL. VALVE SUPPORT	01/10/1997-
071	35G1570	TOP PANEL	01/10/1997-
072	35G2120	DOOR	01/10/1997-
073	35S2290	ELECTRIC BOX	01/10/1997-
074	35S2300	COVER	01/10/1997-
075	35T0610	THERMOSTAT SUPPORT	01/10/1997-
076	131AA14	RUBBER HOSE Ø20x13	01/10/1997-
077	35V8380	PRESSOSTAT SWITCH SUPPORT	01/10/1997-
078	33M0630	STEAM CONDENSER	01/10/1997-
079	3150010	"O" RING	01/10/1997-
080	3601130	CONTROL BOARD	01/10/1997-
081	3601140	DOOR HANDLE	01/10/1997-
082	3601150	SIDE HEAD	01/10/1997-
083	3601190	HANDLE	01/10/1997-
084	3300420	DRAIN PIPE	01/10/1997-
085	32V0100	THERMOSTAT 30°-60°	01/10/1997-
086	36E0010	FOOT	01/10/1997-
088	36G2540	SPRING	01/10/1997-
089	36M1511	HANDLE	01/10/1997-
090	37M7160	CTRL BOARD BAND	01/10/1997-
091	35S2830	PUMP SUPPORT	01/10/1997-
092	37Q1320	GASKET	01/10/1997-
093	32Z4741	PRESSURE-SWITCH 30/70	18/11/1999-
094	35Z0050	TRAP PLATE	01/10/1997-
101	32Z8510	FILTER	01/10/1997-
110	35C8220	PROP. DÉVICE SUPPORT	01/10/1997-
111	3150321	HEAT.ELEM.PROTECTION	01/10/1997-
112	3150520	"O" RING	01/10/1997-
113	33Q4440	DETERGENTCOUPL.	18/11/1999-
114	35E0040	MOTOR PUMP SUPPORT	01/10/1997-
115	3150430	"O" RING Ø 56.52	01/10/1997-
116	36G8540	WASH BLADES 495X58X16	01/10/1997-
117	36G8550	RINSE HUB	01/10/1997-
118	36C3870	"PLUG FOR ARM + RING	01/10/1997-
119	33T2940	""OR"" NOZZLE	01/10/1997-
120	35X4090	RH RINSE ARM	01/10/1997-

Pos	Code	Description	Info
121	35X4100	LH RINSE ARM	01/10/1997-
122	3152210	"O" RING	01/10/1997-
123	36G1340	SPRING	18/11/1999-
124	33M0300	SPACER	18/11/1999-
125	3150520	"O" RING	01/01/2001-